

ALL TEMP WINDOWS Mfg. by Kudzu Millwork, Inc.

Replacement Window Installation

1. Test fit new window: From the interior, place the window into the opening to check fit. If the window fits with shim space on the sides, remove the window. If the window does not fit, modify the opening until it fits. The window should have enough room for shimming and leveling.
2. Install new window: Make sure the rough opening is level, plumb and square.
3. Tilt window up and into the rough opening, with the sash closed and locked.
4. Apply shims at all anchor points to hold the window secure while checking for level, plumb and square. Adjust jamb adjusters with a screwdriver to ensure the sash moves freely.
5. To check plumb – Place a level along the left and right jambs (**Fig. A**)
6. To check level – Place a level along the sill (**Fig. B**)
7. To check square – Measure window diagonally, if the two measurements are equal, the window is square (**Fig. C**)
8. Check to make sure that weather stripping on the sash is sealing properly between the frame and the sash.
9. Once the window is level, plumb and square, install screws into the pre-fabricated installation holes in the jambs. Screws should be 2" or longer, and should easily pass through the installation holes and jamb adjusters.
10. Shims should be located at the anchoring points. Use caution so that the screws are not over tighten the screws, as this will cause the jambs to bow, and impede the operation of the sash.
11. Check the sash and locks for proper operation. Adjust the screws, and or jamb adjusters, to insure proper operation.
12. When installing in a sloped sill application, make sure the accessory sill extender is trimmed to proper length and applied to the window.
13. Loosely place batten insulation around the window frame on the inside, between the frame and the rough opening.
14. Make sure the weeps on the exterior of the window are open so water can drain from the sill.
15. DO NOT drill into or through the sill of the window.
16. Complete necessary exterior trim and caulk for weathertight seal.

Failure to follow these instructions may result in denial of warranty claims.

Please contact Kudzu Millwork, Inc. at 256-417-4919 for additional help

