

How To Disassemble and Re-assemble a Drywall Unit

DISASSEMBLY

1. Verify that the unit is a drywall unit. A drywall unit sticker should be present on the top glass, and blue tape backing should be visible around the perimeter underneath the top glass.
2. Tilt out and remove bottom sash.
3. Remove glazing bead from top glass. **(Fig. A)** Set aside for reinstallation later.
4. Remove top glass.
5. With a screwdriver, carefully remove screws holding meeting rail in place. **(Fig. B)** *These screws are specifically designed for maximum hold in vinyl material and must be reused when reinstalling the meeting rail.*



Fig. A



Fig. B

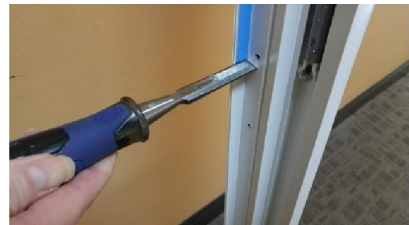


Fig. C

RE-ASSEMBLY

1. Reinstall meeting rail. Use the same screw holes to ensure proper alignment and spacing for the top glass. **(Fig. C & D)**
2. Place set block spacers on meeting rail, and remove all blue backing from glazing tape. **(Fig. E)**
3. Install the top glass.
4. Reinstall glazing bead around the perimeter of the top glass.
5. Reinstall and tilt forward the bottom sash.



Fig. D



Fig. E